

M205
Self-Propelled Windrower

TECHNICAL MANUAL

Part#169547 Rev. Draft 04/19/12

This Manual contains instructions for "SAFETY", "OPERATION", and "MAINTENANCE/SERVICE" for your new MacDon Model M205 Self-Propelled Windrower.



1000141

M205 Self-Propelled Windrower

TECHNICAL MANUAL

Part#169547 Rev. Draft 04/19/12



DANGER

Stop engine and remove key from ignition before leaving operator's seat for any reason. A child or even a pet could engage an idling machine

1. In the cab locate the six bolts (A) that hold the roof to the cab.
2. Remove the caps that conceals the roof bolts.
3. Loosen the bolts enough that you can place a block between the roof and cab at the wiper motor.

NOTE: Be careful, do not damage the headliner, upholstery or crack the windows.

4. Place blocks at the (B) locations, Two blocks at the front and two at the back.

NOTE: Make sure to take care when installing the blocks as to not damage the foam that is on top of the cab.

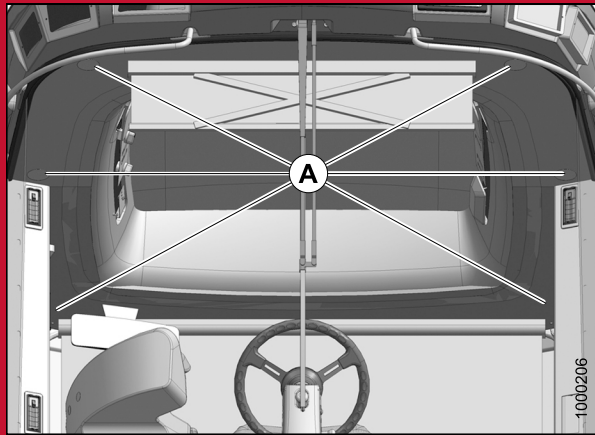


Figure 1

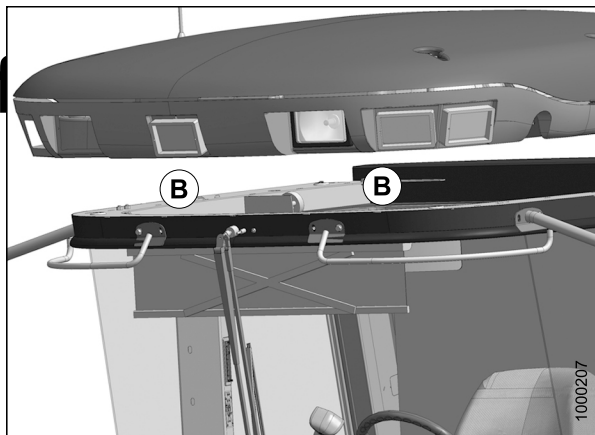


Figure 2

John Deere **John Deere**

Self Loader M205

TECHNICAL MANUAL

Part#169547 Rev. Draft 04/19/12