

Vericut settings are copied from the file

proe.VcProject
or
proe.usr in the
loadpoint/I486NT/vericut
directory

C:/Program Files/proeWildfire 5.0/x86e-win32/vericut

1. Setup Vericut as you wish after loading it from Proe.
2. When prompted on exit to save settings select yes.

This will save the settings selected to the file
in the working directory.

cgtpro.usr

OR

cgtpro_operations.VcProject

3. Open the cgtpro.usr file and copy all of the contents.
4. Browse to the above listed directory.
5. Make a backup copy of the proe.usr file.
6. Open the proe.usr file and select all the contents.
7. Paste the contents from the cgtpro.usr file into the proe.usr file
8. Save changes when closing the file.
9. Settings will now be active when Vericut is started from Proe.